

Assembly components:

Please check all components in Figures 1 and 2 before assembly.

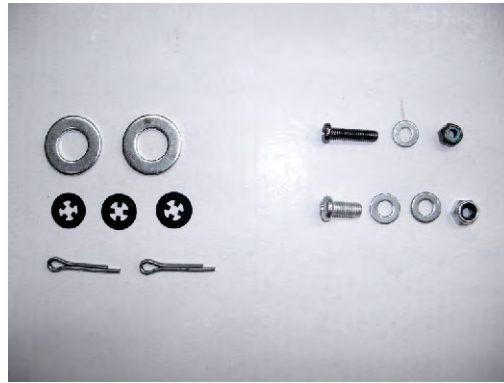


Figure 1

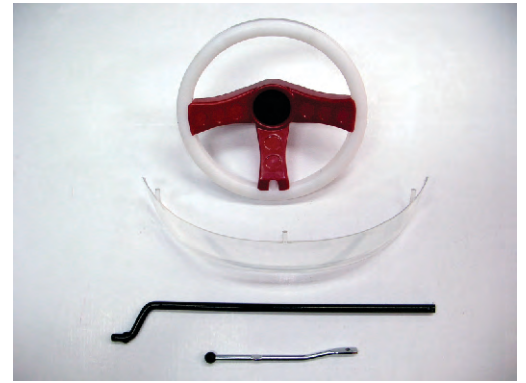


Figure 2

Install Windshield:

Align windshield tabs with three holes in Mustang hood and place windshield in position (Figure 3).

Secure windshield by placing three lock washers on windshield tabs on underside of hood (Figure 4)

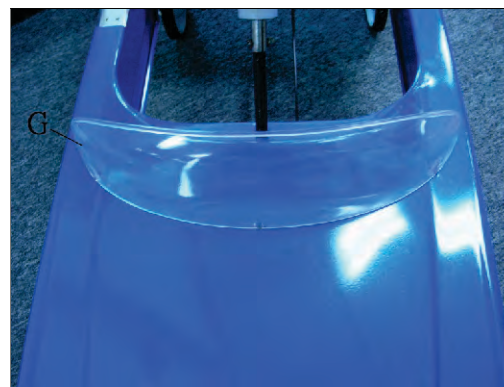


Figure 3

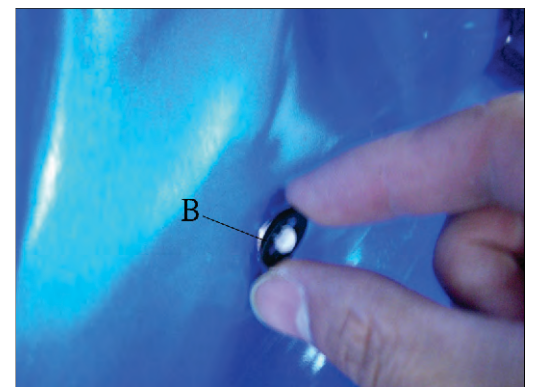


Figure 4

Install Steering Shaft:

Insert the upper end of the steering shaft into the hole near the dashboard (Figure 5).

Insert the lower end of the steering shaft into the short steering arm located in the front of the crossmember (Figure 6).

Secure steering shaft with washers and cotter pins (Figure 7).

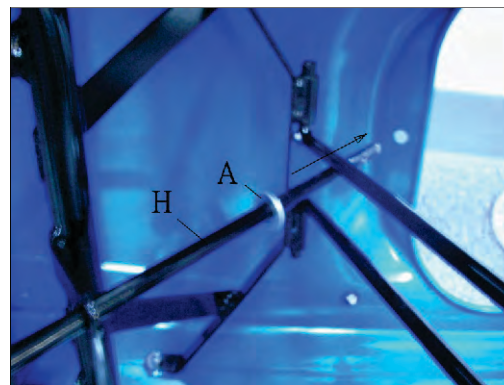


Figure 5

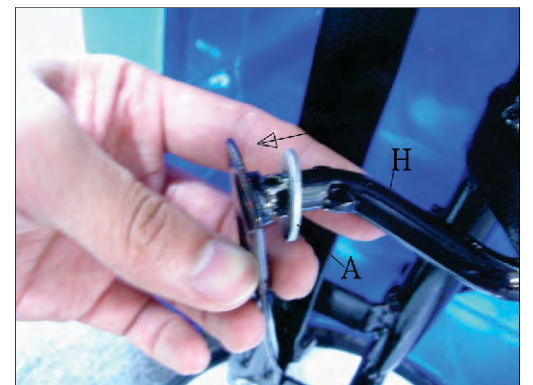


Figure 6

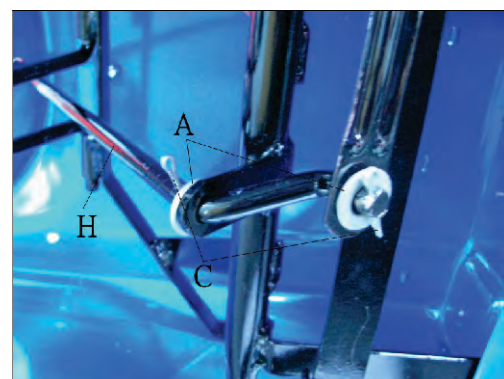


Figure 7

Attach Steering Wheel:

Turn the car onto its wheels, and put the steering wheel on the steering shaft (Figure 8).

Using a wrench and a screw driver, secure it with the supplied screw and the nut (Figure 9).

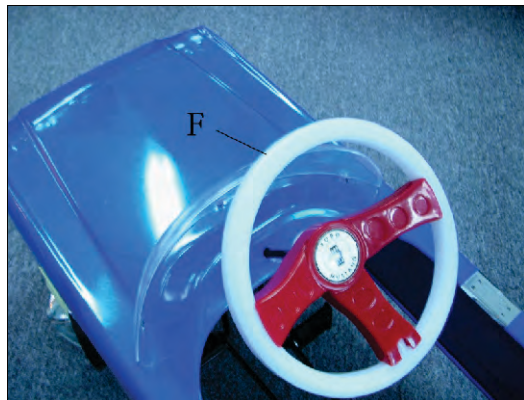


Figure 8

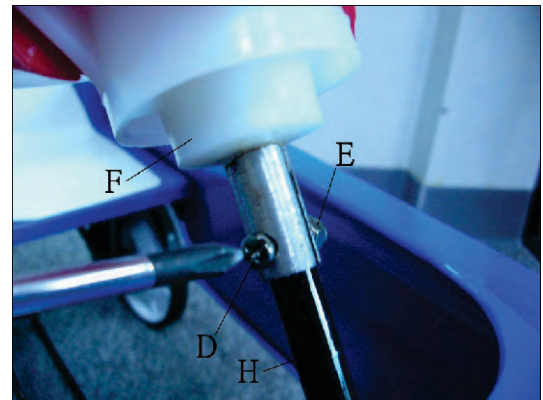


Figure 9

Attach Gear Shift:

Put the Gear Shift lever through the "H" shaped hole and fasten with the supplied nut and bolt (Figures 10 and 11).



Figure 10



Figure 11

CAUTION

Make sure that everyone who uses this car has been fully instructed in its operation. This car does not have a braking system. Do not ride on hills, on steps or near water. Never use car on rough terrain, for jumping or other stunts. Parental supervision required. Shoes should be worn.

MAINTENANCE

Every three months check wheels for wear and grease or oil wheel on axle.

